


# Flowmeter with Temperature Compensator


## Type 4-MT and Type 4D-MT

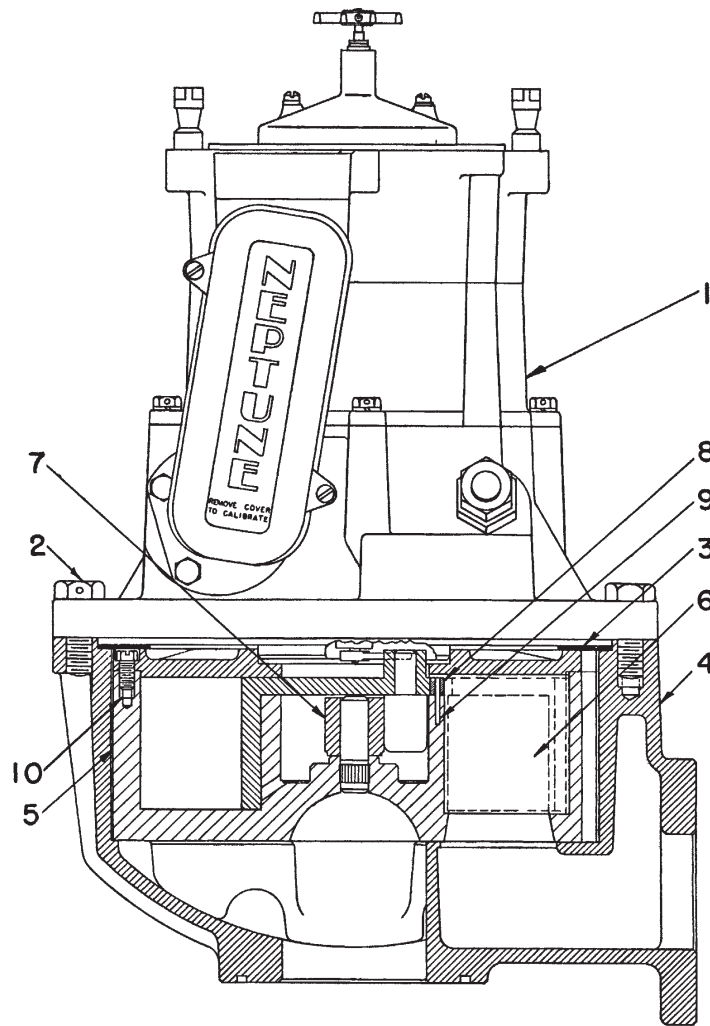

Index	Description	Part No.
1	LP-Gas Temperature Compensator	See Note
2	Cap Screw, Main Case	795-003
	Cap Screw, Main Case (with seal hole)	795-011
3	Gasket	84806-000
4	Main Casing with Locating Pin	400072-001
5	Measuring Chamber Complete	C45806-101
6	Diaphragm	42312-001
7	Roller, Control	42316-001
8	Pin Seal	42546-000
9	Dowel Stud Seal Pin	5211-001
10	Screw, Measuring Chamber	88638-000


*Note: Temperature Compensator parts are shown on pages 8 & 9.*

# Temperature Compensator, Type 1 Style 2

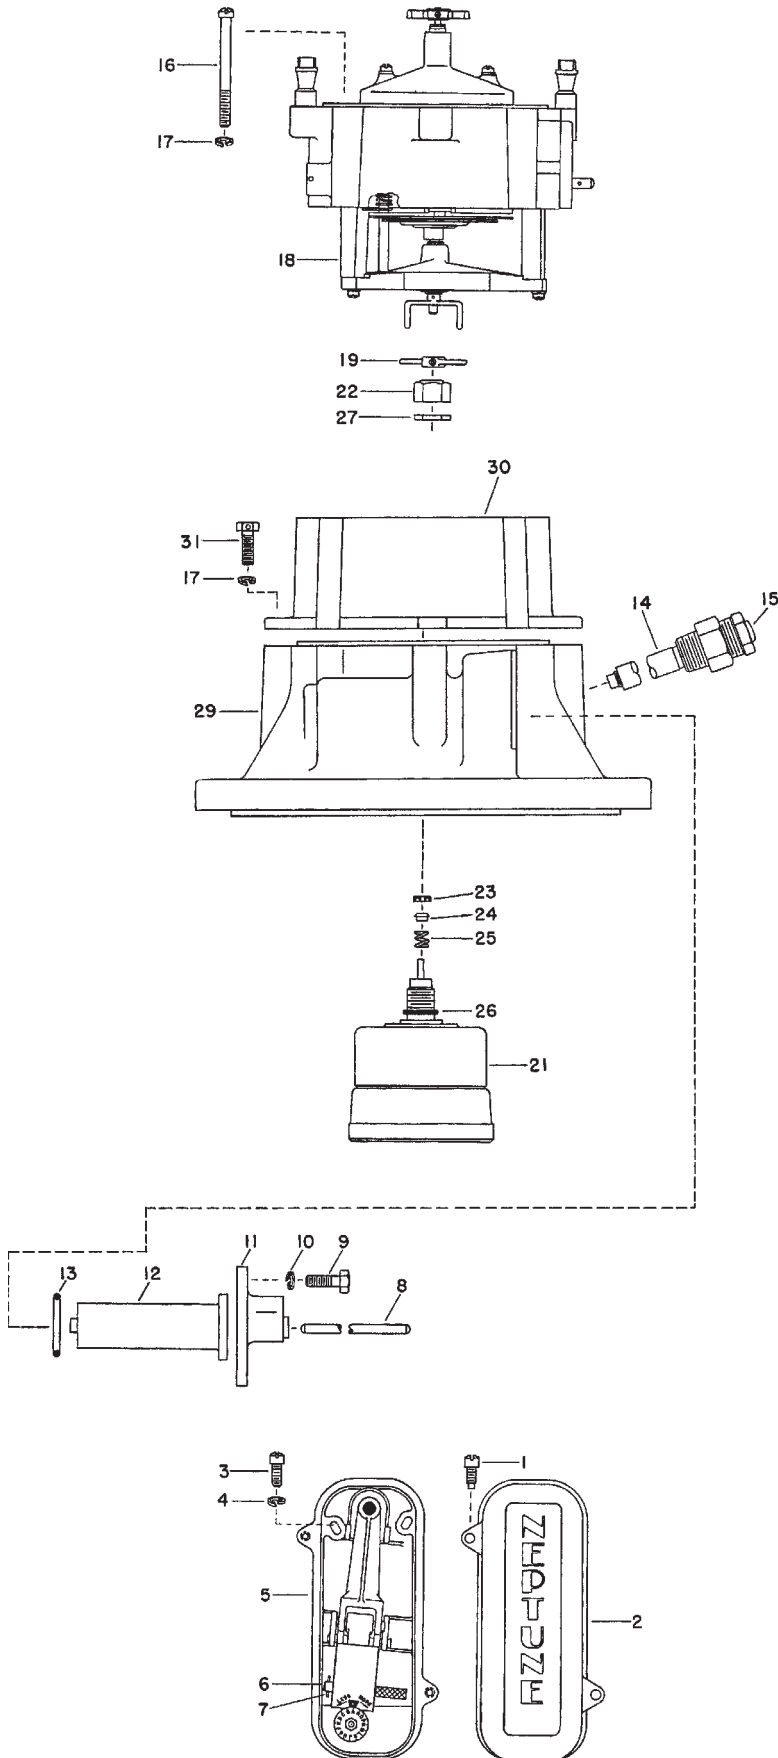

# Temperature Compensator Adapter Unit Complete

Part No. 86602-705

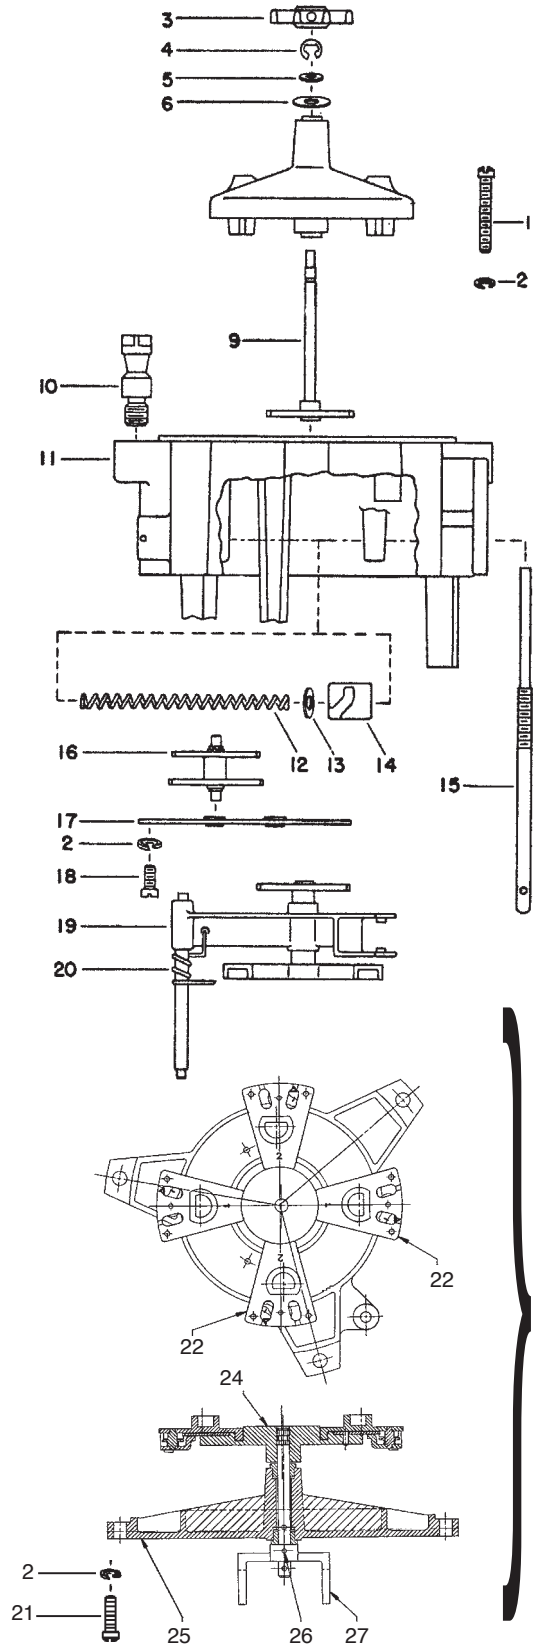

Drive Bracket Assy. complete with Ratchet and Arms.  
Part No. 84913-002